 
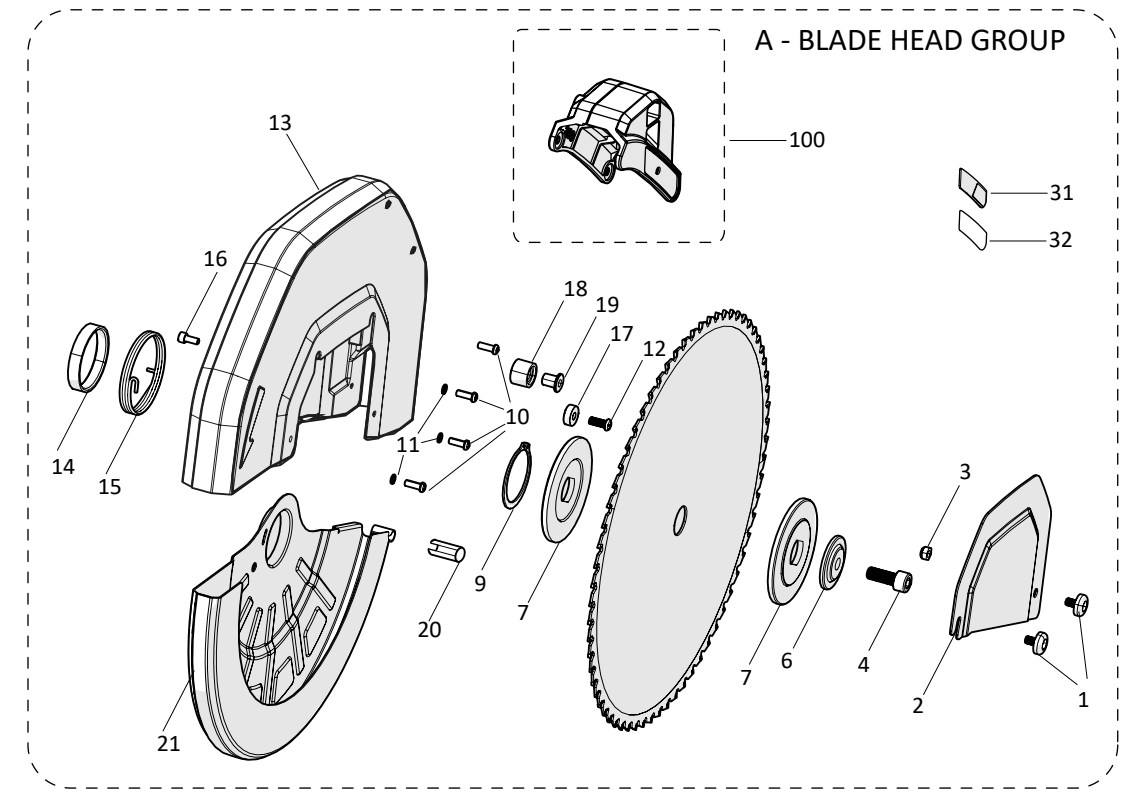 
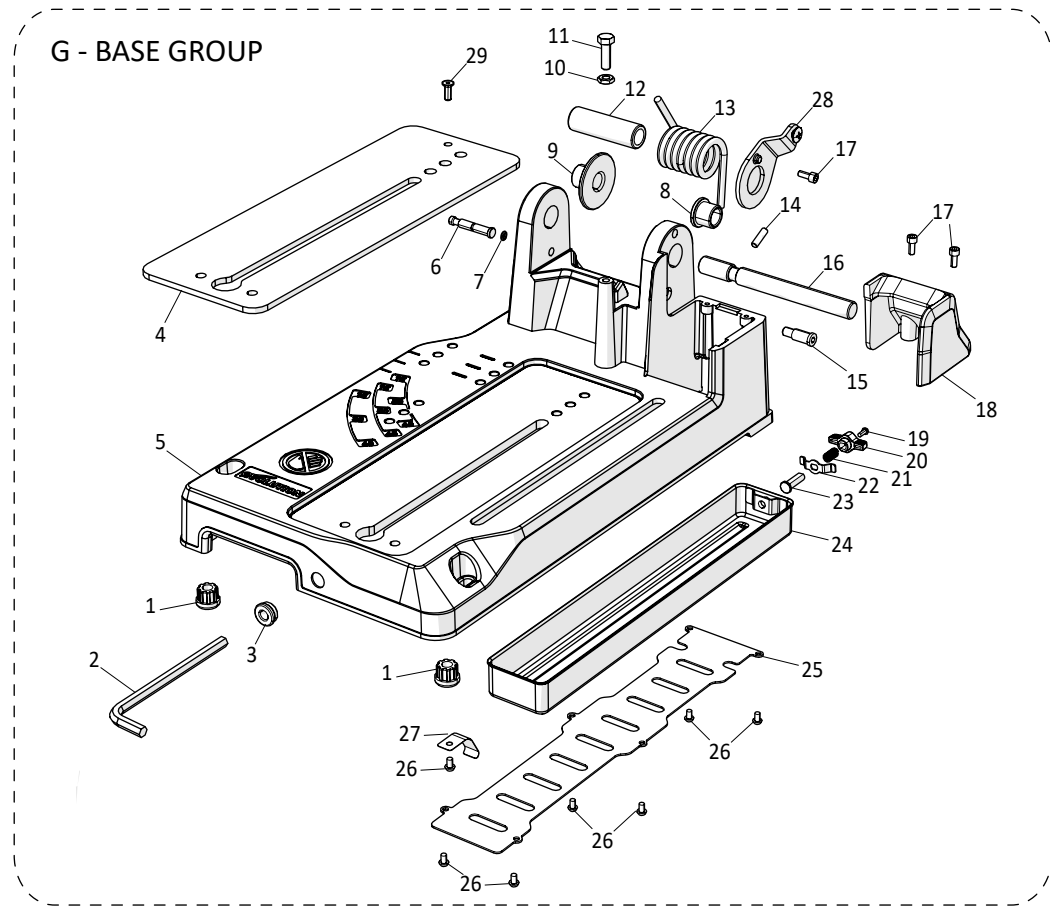 
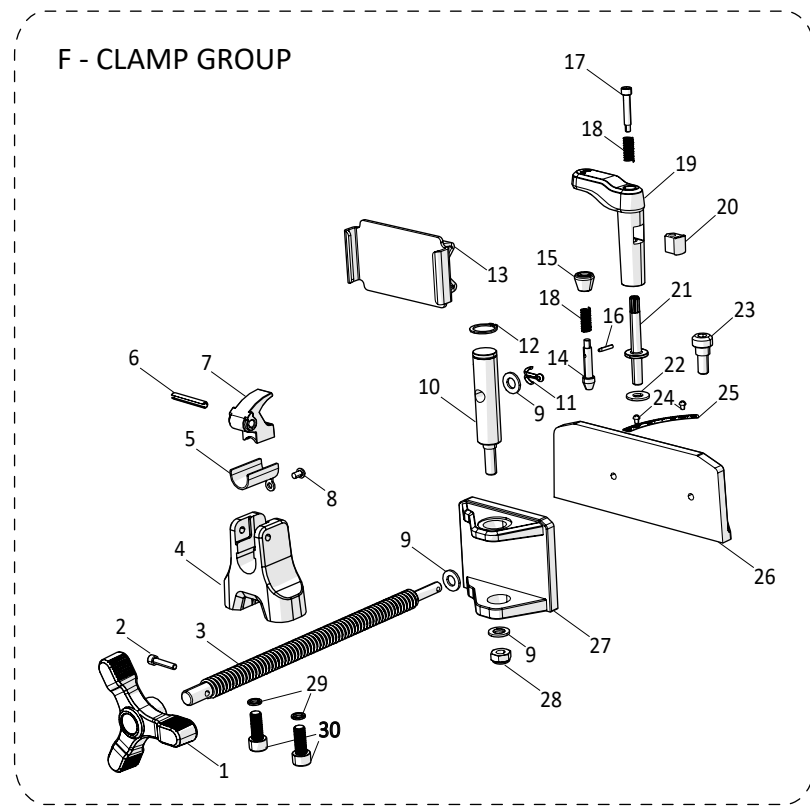 
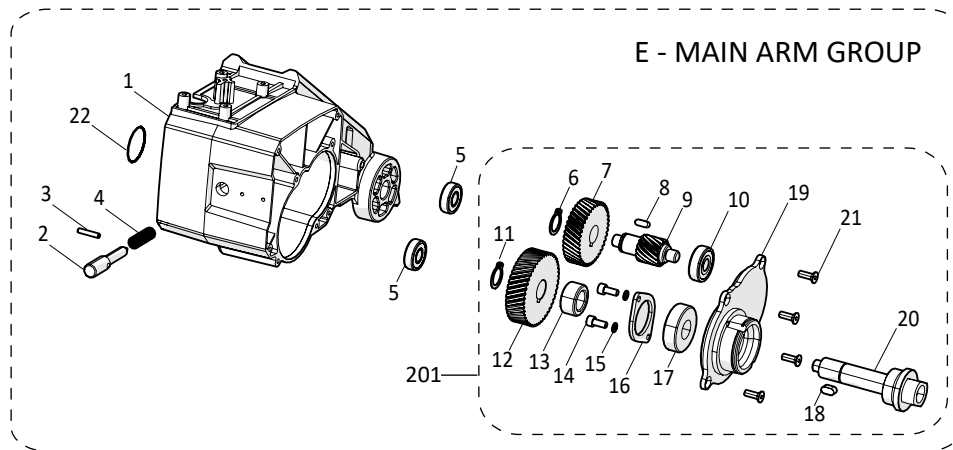 
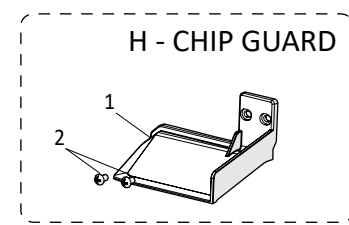 
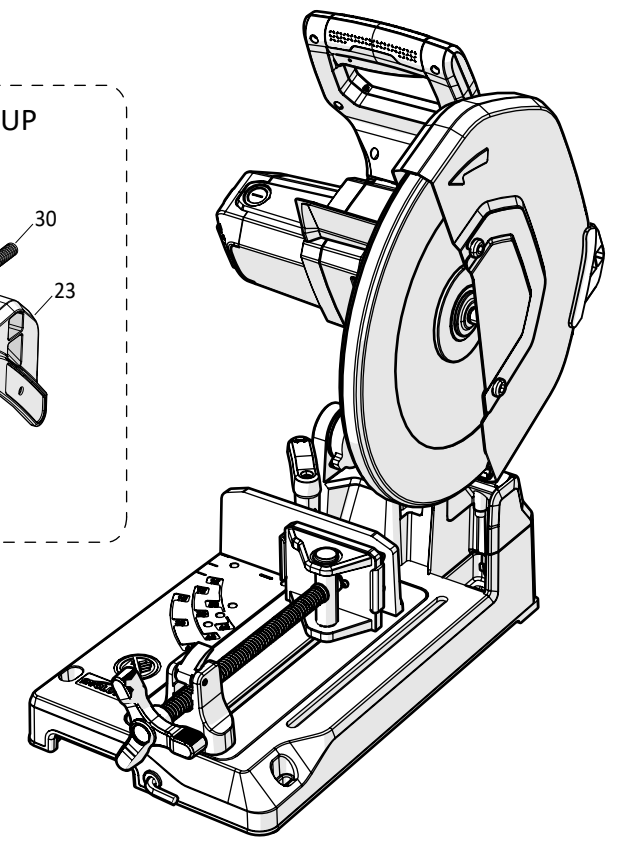 
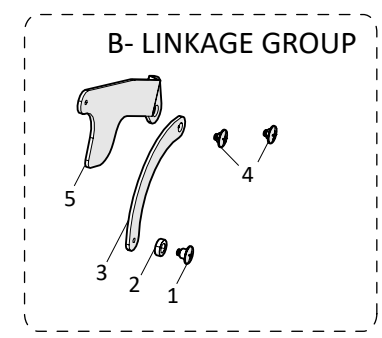 
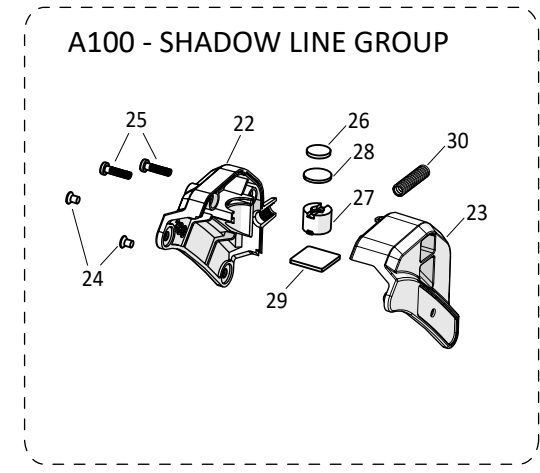 
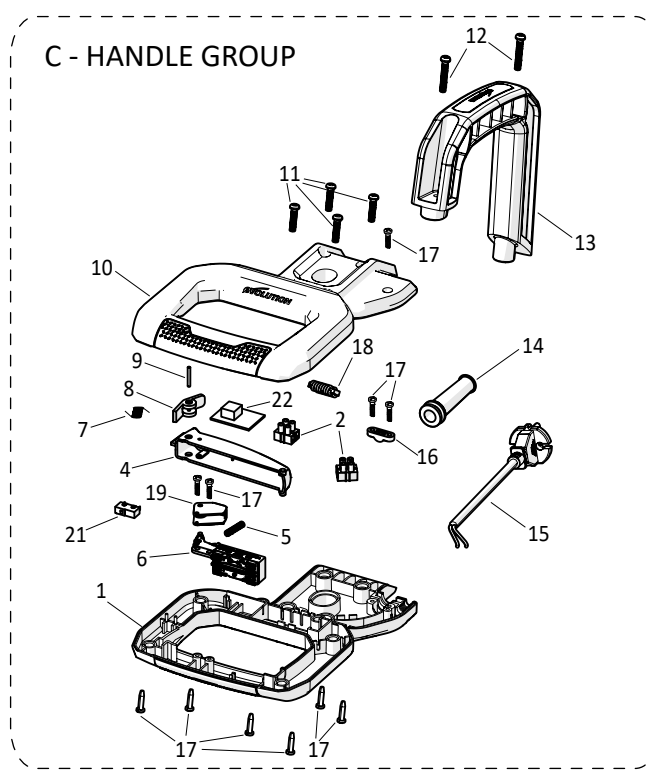 


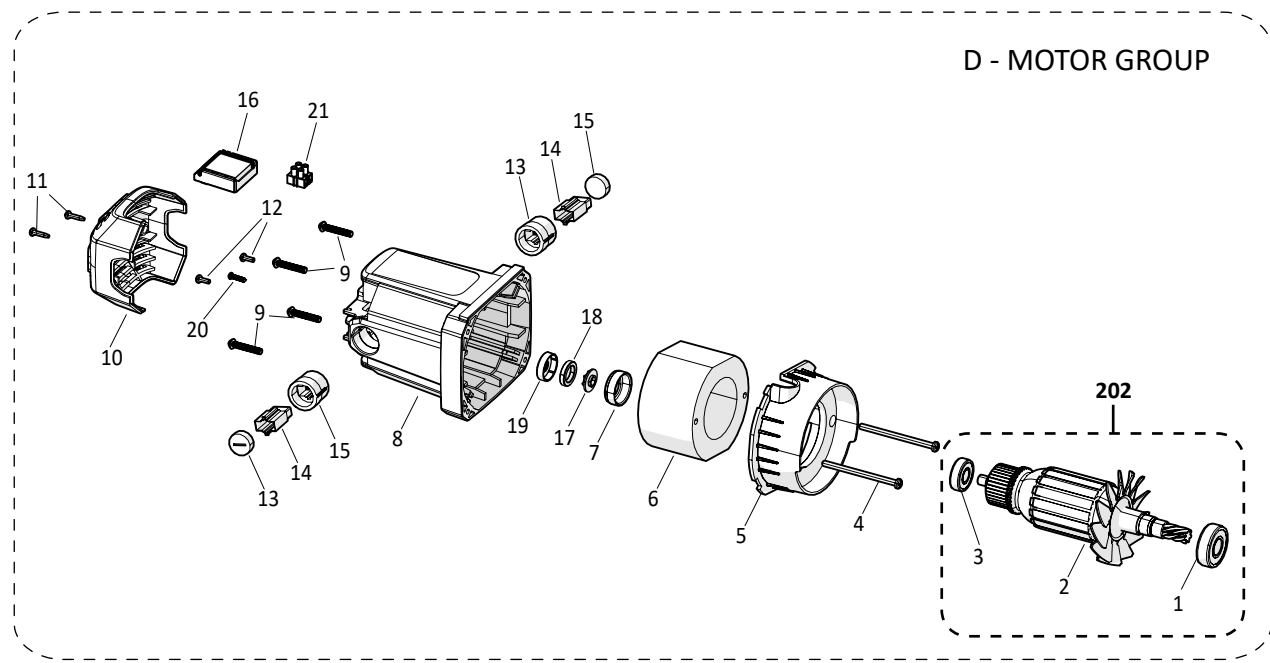

Service Parts List	V5	S15CPS USA 120V	ALL PARTS 184-0004A
15" Steel Cutting Chop Saw			

Item	Description	Part No	Qty	Item	Description	Part No	Qty	Item	Description	Part No	Qty
A01	Arbour Cover Screw	083-0101	2	D01	Ball Bearing 6202 YQ	F-B-6202-2Z	1	F13	V-Vice Assembly - Steel	084-0139	1
A02	Arbour Cover	083-0102	1	D02	Armature 65/110-120V 1800W/15A	084-0316	1	F14	45° Locking Pin	084-0140	1
A03	Locking Nut M6	F-NSH--M6-ST-BO	1	D03	Ball Bearing 629 YQ	F-B-629-2Z	1	F15	45° Locking Knob	084-0141	1
A04	Socket Cap Screw M10x25	F-SHCS-M10-25-ST-BO	1	D04	Pozi Pan Head Tapping Screw ST5x80	F-TFPX-5-80-ST-BO	2	F16	Roller Pin 3.2x18	F-SDL-3-18-ST-BO	1
A06	Blade Washer	083-0103	1	D05	Air Baffle 65	084-0125	1	F17	Quick Release Lever Shaft Screw	084-0142	1
A07	Flange 100	084-0101	2	D06	Stator 65/110-120V 1800W/15A	084-0318	1	F18	Locking Pin Spring	084-0143	2
A09	Circlip φ48	F-CCEXT-48-120-ST-BO	1	D07	Ball Bearing Cap	053-0270	1	F19	Quick Release Lever Blue	084-0144	1
A10	Pozi Pan Head Screw M5x14	F-SPHPZ-M5-14-ST-BO	4	D08	Motor Housing	083-0308	1	F20	Quick Release Lever Shaft Insert	084-0145	1
A11	Spring Washer φ5	F-SWA-M5-ST-BO	3	D09	Pozi Pan Head Screw M5x30 w/ Washer	F-SPHPZ-M5-30-ST-BO	4	F21	Quick Release Lever Shaft	084-0146	1
A12	Pozi Pan Head Screw M6x12	F-SPHPZ-M6-12-ST-BO	1	D10	Eng Cap Blue	084-0303	1	F22	Quick Release Lever Shaft Washer	084-0147	1
A13	Blade Head Assembly 380	084-0302	1	D11	Pozi Pan Head Tapping Screw ST4x16	F-TFPX-4-16-ST-BO	2	F23	Socket Cap Shoulder Screw	084-0148	1
A14	Moving Guard Spring Spacer 380	084-0103	1	D12	Pozi Pan Head Screw M4x10	F-SPHPZ-M4-10-ST-BO	2	F24	Pozi Pan Head Screw M4x5	F-SPHPZ-M4-5-ST-BO	2
A15	Moving Guard Spring	083-0107	1	D13	Brush Holder	083-0152	2	F25	Fence Scale	084-0149	1
A16	Socket Cap Screw M5x12	F-SHCS-M5-12-ST-BO	1	D14	Carbon Brush 110-120V	083-0154	2	F26	Fence - Cast	084-0150	1
A17	Ball Bearing 606	F-B-606-2Z	1	D15	Brush Holder Cover	083-0155	2	F27	Moving Vice Jaw - Cast	084-0151	1
A18	Bump Stop	083-0108	1	D16	PCB Assembly 110 - 120V	084-0323	1	F28	Locking Nut M10	F-NNIF-M10-ST-BO	1
A19	Bump Stop Fixing	083-0109	1	D17	Magnetic Ring Holder	053-0267	1	F29	Spring Washer φ8	F-SWA-M8-ST-BO	2
A20	Slider Cap	083-0110	1	D18	Magnetic Ring	053-0265	1	F30	Socket Cap Screw M8x25	F-SHCS-M8-25-ST-BO	2
A21	Moving Guard Assembly 380	084-0105	1	D19	Magnetic Ring Cover	053-0266	1				
A100	LED ASSEMBLY 380	084-0321	1	D20	Pozi Pan Head Screw M4x14	F-SPHPZ-M4-14-ST-BO	1	G01	Rubber Foot 084	084-0152	4
A22	LED HOUSING LH 380	084-0300	1	D21	Terminal Block 6 Holes	053-0288	1	G02	Allen Key S=8	F-HEXKEY-M6-ST-BO	1
A23	LED HOUSING RH 380	084-0301	1	D202	Armature 55 Assembly 110-120V UK/USA	083-0050	1	G03	Rubber Grommet	083-0185	1
A24	M5 Screw Countersunk M5X8	F-SCHPZ-M5-8-ST-BO	2					G04	Base - Wear Plate	084-0154	1
A25	M4 SCREW PAN HEAD M4X14	F-TFPX-M4-14-ST-BO	2	E01	Arm	083-0160	1	G05	Base	084-0153	1
A26	LED SPACER	084-0309	1	E02	Arbour Locking Pin	083-0161	1	G06	Head Lock-Down Pin 084	084-0155	1
A27	LED RETAINER	084-0310	1	E03	Roller Pin 4x20	F-SDL-4-20--ST-BO	1	G07	O Ring 4.5x1.8	083-0188	1
A28	LED PCBA	084-0311	1	E04	Locking Pin Spring	083-0162	1	G08	Arm Shaft Spacer Small	084-0156	1
A29	LED GLASS SHEILD	084-0312	1	E05	Ball Bearing 6000 YQ	F-B-6000-2Z	2	G09	Arm Shaft Spacer Big	084-0157	1
A30	Corrugated Pipe	084-0308	1	E06	Circlip φ16	F-CCEXT-16-100-ST-BO	1	G10	Hex Nut M8	F-NSF-M8-ST-BO	1
A31	LED Housing Product Plaque S15CPS	084-0326	1	E07	1st Drive Gear	083-0163	1	G11	Hex Screw M8x25	F-HSS-M8-ST-BO	1
A32	M3 Double Sided Adhesive Tape 0.21MM	084-0327	1	E08	Key 5x5x12	083-0164	1	G12	Main Torsion Spring Spacer	083-0190	1
				E09	Gear Shaft	083-0165	1	G13	Main Torsion Spring 084	084-0158	1
B01	Linkage Shoulder Screw Upper	083-0115	1	E10	Ball Bearing 6200 YQ	F-B-6200-2Z	1	G14	Hex Socket Set Screw M6X20	F-SSCFP-M6-20-ST-BO	1
B02	Screw Spacer	083-0116	1	E11	Circlip φ17	F-CCEXT-17-100-ST-BO	1	G15	Stop Pin	084-0159	1
B03	Small Linkage	083-0117	1	E12	2nd Drive Gear	083-0166	1	G16	Arm Pivot Shaft 084	084-0160	1
B04	Linkage Shoulder Screw Middle	083-0118	1	E13	Gear Spacer	083-0167	1	G17	Socket Cap Screw M5x12	F-SHCS-M5-12-ST-BO	2
B05	Main Linkage	083-0119	1	E14	Socket Cap Screw M5x12	F-SHCS-M5-12-ST-BO	2	G18	Chip Deflector - Cast	084-0161	1
				E15	Spring Washer φ5	F-SWA-M5-ST-BO	2	G19	Pozi Pan Head Screw M4x10	F-SPHPZ-M4-10-ST-BO	1
C01	Main Handle Lower	083-0306	1	E16	Bearing Bracket	083-0168	1	G20	Chip Tray Locking Knob	084-0162	1
C02	Terminal Block	083-0122	1	E17	Ball Bearing 6203 YQ	F-B-6203-2Z	1	G21	Chip Tray Spring	084-0163	1
C04	Trigger	084-0304	1	E18	Key 6x6x14	083-0169	1	G22	Locking Plate	084-0164	1
C05	Main Trigger Spring	083-0126	1	E19	Gear Box Cover	083-0170	1	G23	Chip Tray Locking Screw	084-0165	1
C06	Trigger Switch	084-0307	1	E20	Arbour Shaft	083-0171	1	G24	Chip Tray Assembly	084-0166	1
C07	Trigger Lock Spring	083-0128	1	E21	Socket Cap Countersunk Screw M5x15	F-SCHPZ-M5-15-ST-BO	4	G25	Chip Tray Plate	084-0167	1
C08	Lock Trigger	083-0129	1	E22	Rubber Bearing Ring	083-0196	1	G26	Pozi Pan Head Screw M5x8	F-SPHPZ-M5-8-ST-BO	7
C09	Trigger Lock Pin	083-0130	1	E201	Gearbox Assembly (R355)	083-0055	1	G27	Chip Tray Spring Plate	084-0168	1
C10	Main Handle Upper	083-0307	1					G28	Main Linkage Bracket	084-0169	1
C11	Pozi Pan Head Screw M5x30 w/ Washer	F-SPHPZ-M5-30-ST-BO	4	F01	Clamp Bar Handle Blue	084-0132	1	G29	Socket Cap Countersunk Screw M5x15	F-SCHPZ-M5-15-ST-BO	1
C12	Pozi Pan Head Screw M5x30 w/ Washer	F-SPHPZ-M5-30-ST-BO	2	F02	Pozi Pan Head Screw M5x25	F-SPHPZ-M5-25-ST-BO	1	G30	Chip Tray Release Bolt (USA)	084-0175	1
C13	Carry Handle	083-0132	1	F03	Clamp Bar - 20mm/Trapezoid	084-0133	1	G31	Wave Washer M6	F-WW-M6-ST-BO	1
C14	Cable Sleeve Large	083-0134	1	F04	Clamp Bar Support - QR	084-0134	1	G32	Chip Tray Spacer	084-0176	1
C15	Cable US 120V/R10f	084-0110	1	F05	Clamp Bar Wear Plate	084-0135	1	G33	Locking Nut M6	F-NSH-M6-ST-BO	1
C16	Cable Strain Clamp	083-0140	1	F06	Quick Release Vice Roller Pin	F-SDL-6-40-ST-BO	1				
C17	Pozi Pan Head Tapping Screw ST4x16	F-TFPX-4-16-ST-BO	11	F07	Quick Release Vice	084-0137	1	H01	Chip Guard	084-0170	1
C18	RF Inductor Coil	083-0195	1	F08	Pozi Pan Head Screw M5x8	F-SPHPZ-M5-8-ST-BO	1	H02	Pozi Pan Head Screw M5x8	F-SPHPZ-M5-8-ST-BO	2
C19	Switch Button	084-0305	1	F09	Washer φ10xφ20x2	F-W-M10-ST-BO	3				
C21	LED Switch	084-0314	1	F10	Moving Vice Spindle - QR	084-0138	1				
C22	LED PSU PCBA 110/120V AC	084-0331	1	F11	Split Pin 3x25	083-0176	1				
				F12	Circlip φ22	F-CCEXT-22-120-ST-BO	1				