



**FURY**  
**5-S**

**Service Parts List**

**V: 056-0001.01**

**255mm Multi-Material Cutting Table Saw**

**230V**  
**UK**

No.	Description	Part Code	Qty
13	WING NUT	056-0113	5
14	CROSS HEAD SCREWS	056-0333	1
15	O-RING	056-0236	1
16	TABLE INSERT	056-0334	1
17	TABLE	056-0336	1
18	COUNTERSUNK INNER HEX SCREW	F-SCHS-M6-25-ST-BO	8
19	SCREW	056-0292	2
20	HEX NUT	F-NSF-M6-ST-BZP	35
21	SQUARE NECK SCREW	056-0104	7
26	PUSH STICK SUPPORT	056-0226	1
27	HEX NUT	F-NSH-M6-ST-BO	2
28	TABLE SUPPORT BLOCK	056-0337	1
29	THREAD FORMING SCREW	F-TFPX-4.2-13-ST-BO	7
31	THREAD FORMING SCREW	F-TFPX-4-10-ST-BO	6
32	CARBON BRUSH	056-0130	2
33	BRUSH HOLDER	056-0129	2
38	THREAD FORMING SCREW	F-TFPX-4.2-16-ST-BO	4
47	RIVING KNIFE BRACKET	056-0303	1
48	RIVING KNIFE	056-0342	1
49	HEX SCREWS	F-HFB-M6-25-BZP	3
50	RIVING KNIFE CLAMP	056-0343	1
51	SOCKET HEAD CAP SCREWS	F-SHCS-M5-12-ST-BO	3
52	SPRING WASHER M5	F-SWA-M5-ST-BO	3
53	SCREWS	056-0344	10
54	REAR MOUNT PLATE	056-0345	1
55	ROTATING SHAFT	056-0346	2
56	SPLIT PIN	F-SP-2.5-20-ST-BO	2
57	REAR BEVEL SHAFT SUPPORT	056-0347	1
58	LOCKING PLATE	056-0348	2
59	HEX NUT	F-NSF-M6-ST-BZP	8
60	DUST COVER	056-0158	1
61	CROSS HEAD SCREWS	F-SHPHZ-M6-16-ST-BO	2
62	PLATE	056-0350	1
63	WASHER	056-0237	2
64	BLADE GUARD PLATE	056-0351	1
65	EXTRACTION HOSE	056-0159	1
81	CROSS HEAD ASSEMBLY	056-0354	3
82	HANGER FRAME	056-0355	1
83	INNER BLADE FLANGE	056-0304	1
85	OUTER BLADE FLANGE	056-0305	1
86	BLADE BOLT	056-0157	1
87	CROSS HEAD ASSEMBLY	056-0306	3
88	BEVEL INDICATOR	056-0163	1
89	HANGER FRAME PLATE	056-0307	1
90	BEVEL BRACKET - DRIVING ROD	056-0308	1
91	WASHER	056-0169	1
92	BEVEL GEAR	056-0170	2
94	SELF TAPPING SCREW	F-TFPX-4.2-22-ST-BO	2
97	WASHER	056-0165	1
98	SPRING	056-0166	1
99	BEVEL LOCK KNOB	056-0167	1
106	FRONT BEVEL SHAFT SUPPORT	056-0309	1
107	FRONT MOUNT PLATE	056-0310	1
108	BLADE GUARD	056-0311	1
109	Nut	056-0312	1
110	Allen Key	056-0313	1
112	DOUBLE NUT	056-0315	1
113	THREADED ROD	056-0316	1
114	BEVEL GEAR WASHER	056-0179	1
116	MAIN CASING	056-0212	1
119	CORD PROTECTOR	056-0206	1
120	CABLE CLAMP	056-0205	1
121	POWER CORD 230V (UK)	056-0207	1
122	CAPACITOR 230V (UK)	056-0191	1
123	SELF TAPPING SCREWS	056-0317	4
124	SWITCH 230V (UK/EU)	056-0318	1
125	SWITCH BOX	056-0201	1
126	SWITCH BOX COVER	056-0202	1
127	SCREWS	F-SCHPZ-M5-12-ST-BO	3
128	GEAR RACK	056-0322	1
129	HEX NUT	F-NSF-M5-ST-BO	3
130	HEX SCREWS	F-HFB-M6-16-ST-BZP	2
131	WASHER	056-0162	9
132	45° BUSH	056-0203	1
133	90° BUSH	056-0204	1
134	ANGLE LABEL	056-0189	1

No.	Description	Part Code	Qty
135	SQUARE NECK SCREW	056-0235	1
136	THREADED SPACER	056-0213	1
137	WASHER	056-0214	1
138	BLADE SPANNER A	056-0215	1
139	BLADE SPANNER B	056-0216	1
140	RUBBER FOOT	056-0220	4
141	PUSH STICK	056-0358	1
142	LEG A	056-0323	4
143	HEX SCREWS	056-0360	36
144	SOCKET SCREWS	056-0324	1
145	BEAM B	056-0218	2
146	SQUARE NUT	056-0325	8
147	BEAM C	056-0221	2
148	CROSS HEAD SCREWS	056-0326	5
149	WASHER	056-0327	4
150	STABILITY SUPPORT FOOT	056-0328	2
151	STABILITY SUPPORT	056-0361	2
171	CONNECTOR	056-0369	1
173	OVERLOAD SWITCH 230 V (UK/EU)	056-0371	1
174	LEFT TABLE SUPPORT BAR	056-0372	2
175	EXTENSION TABLE	056-0373	2
176	RIGHT TABLE SUPPORT BAR	056-0224	2
178	CASE LABEL	056-0234	1
181	HOLD DOWN CLAMP	056-0254	1
182	RIP FENCE ASSEMBLY	056-0375	1
183	BLADE GUARD	056-0377	1
184	ANGLE GAUGE	056-0378	1
185	GEARBOX ASSEMBLY	056-0380	1
186	MOTOR ASSEMBLY 230V (UK/EU)	056-0381	1
187	HANDLE ASSEMBLY	056-0260	1
188	LEFT GUIDE RAIL ASSEMBLY	056-0385	1
189	RIGHT GUIDE RAIL ASSEMBLY	056-0387	1
190	ASSEMBLY SCREW KIT	056-0389	1

**evolution**<sup>®</sup>  
evolutionpowertools.com

**FURY**  
**5-S**

Service Parts List

V: 056-0001.01

255mm Multi-Material Cutting Table Saw

**230V**  
**UK**