

R210SMS SELF-ASSEMBLY SLIDE BAR PINS EJECTED IN THE BEARING WHEN FITTING.

To remove the slide bar and reset the pins please follow the following instructions:

- Secure the base on a good flat surface, ensuring it is supported at the base, for example on the floor or a solid bench. **(Fig. 1)**
- Place a piece of wood horizontally against the orange plastic end cover of the bars. **(Fig. 2)**
- Press the bar in until it stops.
- Then using a soft hammer or mallet give the wood a sharp tap, which will push the bars completely through. **(Fig. 3)**
- Reset the locking pins, push the pin in level with the bar then pull out the plastic loop on the end until it stops. This will lock the pins back in place. **(Fig. 4a, 4b)**

NOTE: This will not damage the bearing or the slide carriage bar.



Fig. 1



Fig. 2



Fig. 3



Fig. 4a

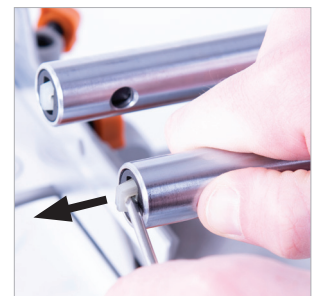


Fig. 4b