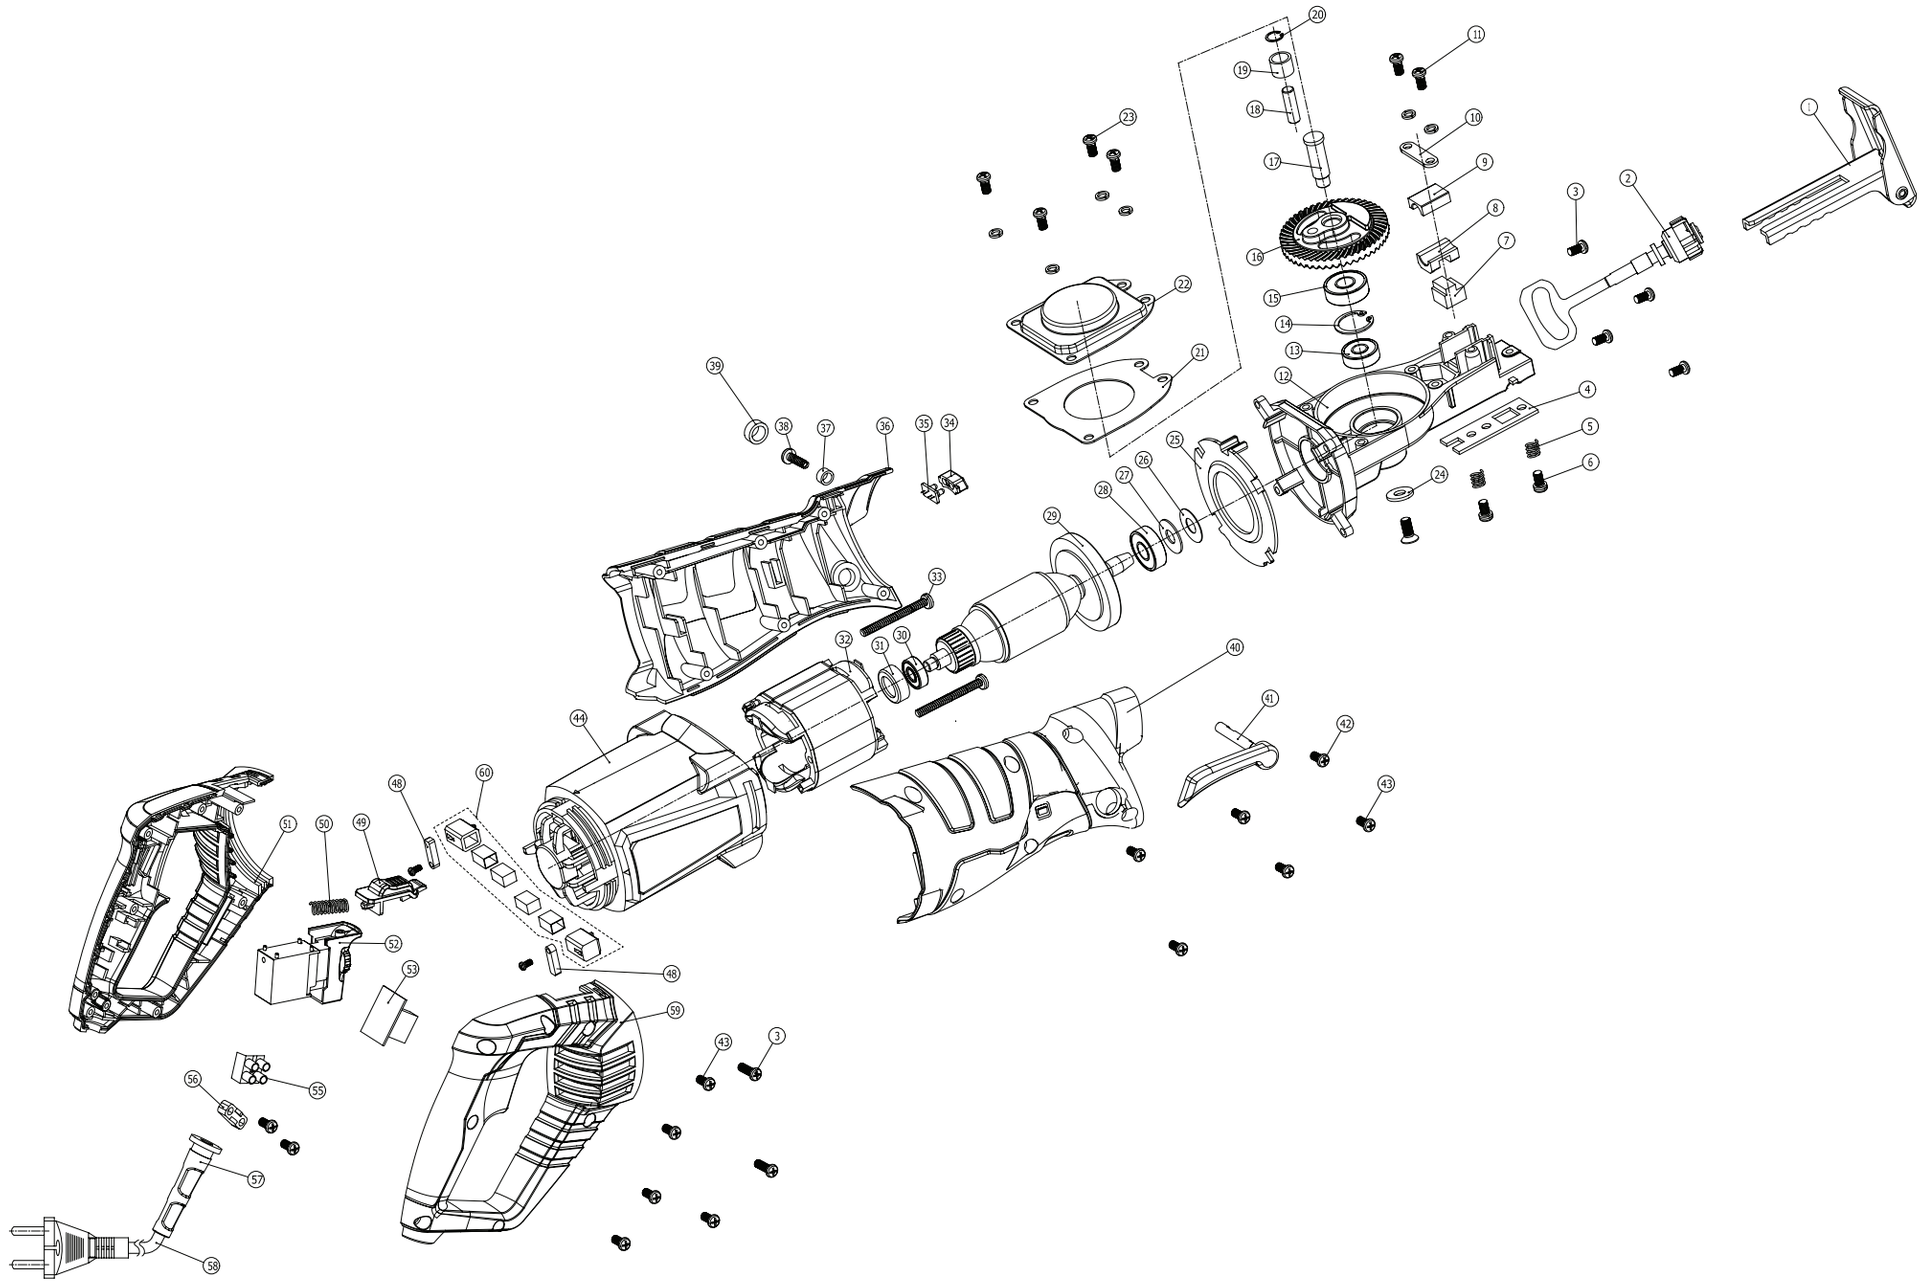

R230 RCP

Service Parts List	V: 045-0004.01	120V US
Evolution Multi-Material Cutting Reciprocating Saw		

No.	Description	Part Code	Qty
1	WORK PIECE SUPPORT	045-0170	1
2	RECIPROCATE SHAFT	045-0171	1
3	CROSS HEAD SCREW ST4*20	045-0172	6
4	BAFFLE	045-0173	1
5	BAFFLE SPRING	045-0174	2
6	BAFFLE SCREW	045-0175	2
7	LUBRICATION PAD	045-0176	1
8	UNDER SLIDE RAIL	045-0177	1
9	UPPER SLIDE RAIL	045-0178	1
10	SLIDE RAIL CLAMP	045-0179	1
11	CROSS HEAD SCREW M5*10 + WASHER	045-0180	2
12	GEAR SUPPORT	045-0181	1
13	BEARING 608-2Z	F-B-608-2Z	1
14	INTERNAL CIRCLIP - 22MM	045-0182	1
15	BEARING 6000-2Z	F-B-6000-2Z	1
16	GEAR	045-0183	1
17	SHAFT	045-0184	1
18	SMALL SHAFT	045-0185	1
19	SHAFT SLEEVE	045-0186	1
20	EXTERNAL CIRCLIP Φ7	045-0187	1
21	PLATE	045-0188	1
22	COVER PLATE	045-0189	1
23	CROSS HEAD SCREW M5*14 +WASHER	045-0190	5
24	WASHER	045-0191	1
25	BAFFLE FAN	045-0192	1
26	FIBRE WASHER	045-0193	1
27	DUST WASHER	045-0194	1
28	BEARING 6000-2RSR	F-B-6000-2RSR	1
29	ARMATURE 120V US	045-0236	1
30	BEARING 607-2RSR	F-B-607-2RSR	1
31	BEARING RETAINER	045-0197	1
32	FIELD COIL 120V US	045-0231	1
33	CROSS HEAD SCREW ST4*53	F-TFPX-4-53-ST-BO	2
34	LED COVER	045-0200	1
35	LED LIGHT PCB	045-0201	1
36	LEFT HOUSING	045-0202	1
37	RETAINER RING	045-0203	1
38	CROSS HEAD SCREW M4*6	F-SPHPZ-M4-6-ST-BO	1
39	SCREW COVER	045-0204	1
40	RIGHT HOUSING	045-0205	1
41	RELEASE LEVER	045-0206	1
42	CROSS HEAD SCREW ST3*12	F-TFPX-3-12-ST-BO	3
43	CROSS HEAD SCREW ST4*16	F-TFPX-4-16-ST-BO	12
44	MAIN HOUSING	045-0207	1
48	BRUSH PLATE	045-0211	2
49	ROTATING LOCK SWITCH	045-0212	1
50	SPRING	045-0213	1
51	LEFT HANDLE	045-0214	1
52	SPEED SWITCH 120V	045-0233	1
53	VOLTAGE TRANSFORMER 120V	045-0234	1
55	CONNECTION BLOCK	045-0218	1
56	CABLE CLAMP	045-0219	1
57	CABLE SLEEVE	045-0220	1
58	POWER CABLE 120V USA	045-0226	1
59	RIGHT HANDLE	045-0224	1
60	CARBON BRUSH ASSEMBLY (120V)	045-0235	2

No.	Description	Part Code	Qty

No.	Description	Part Code	Qty

Service Parts List | **V: 045-0004.01**

Evolution Multi-Material Cutting Reciprocating Saw

120V US