


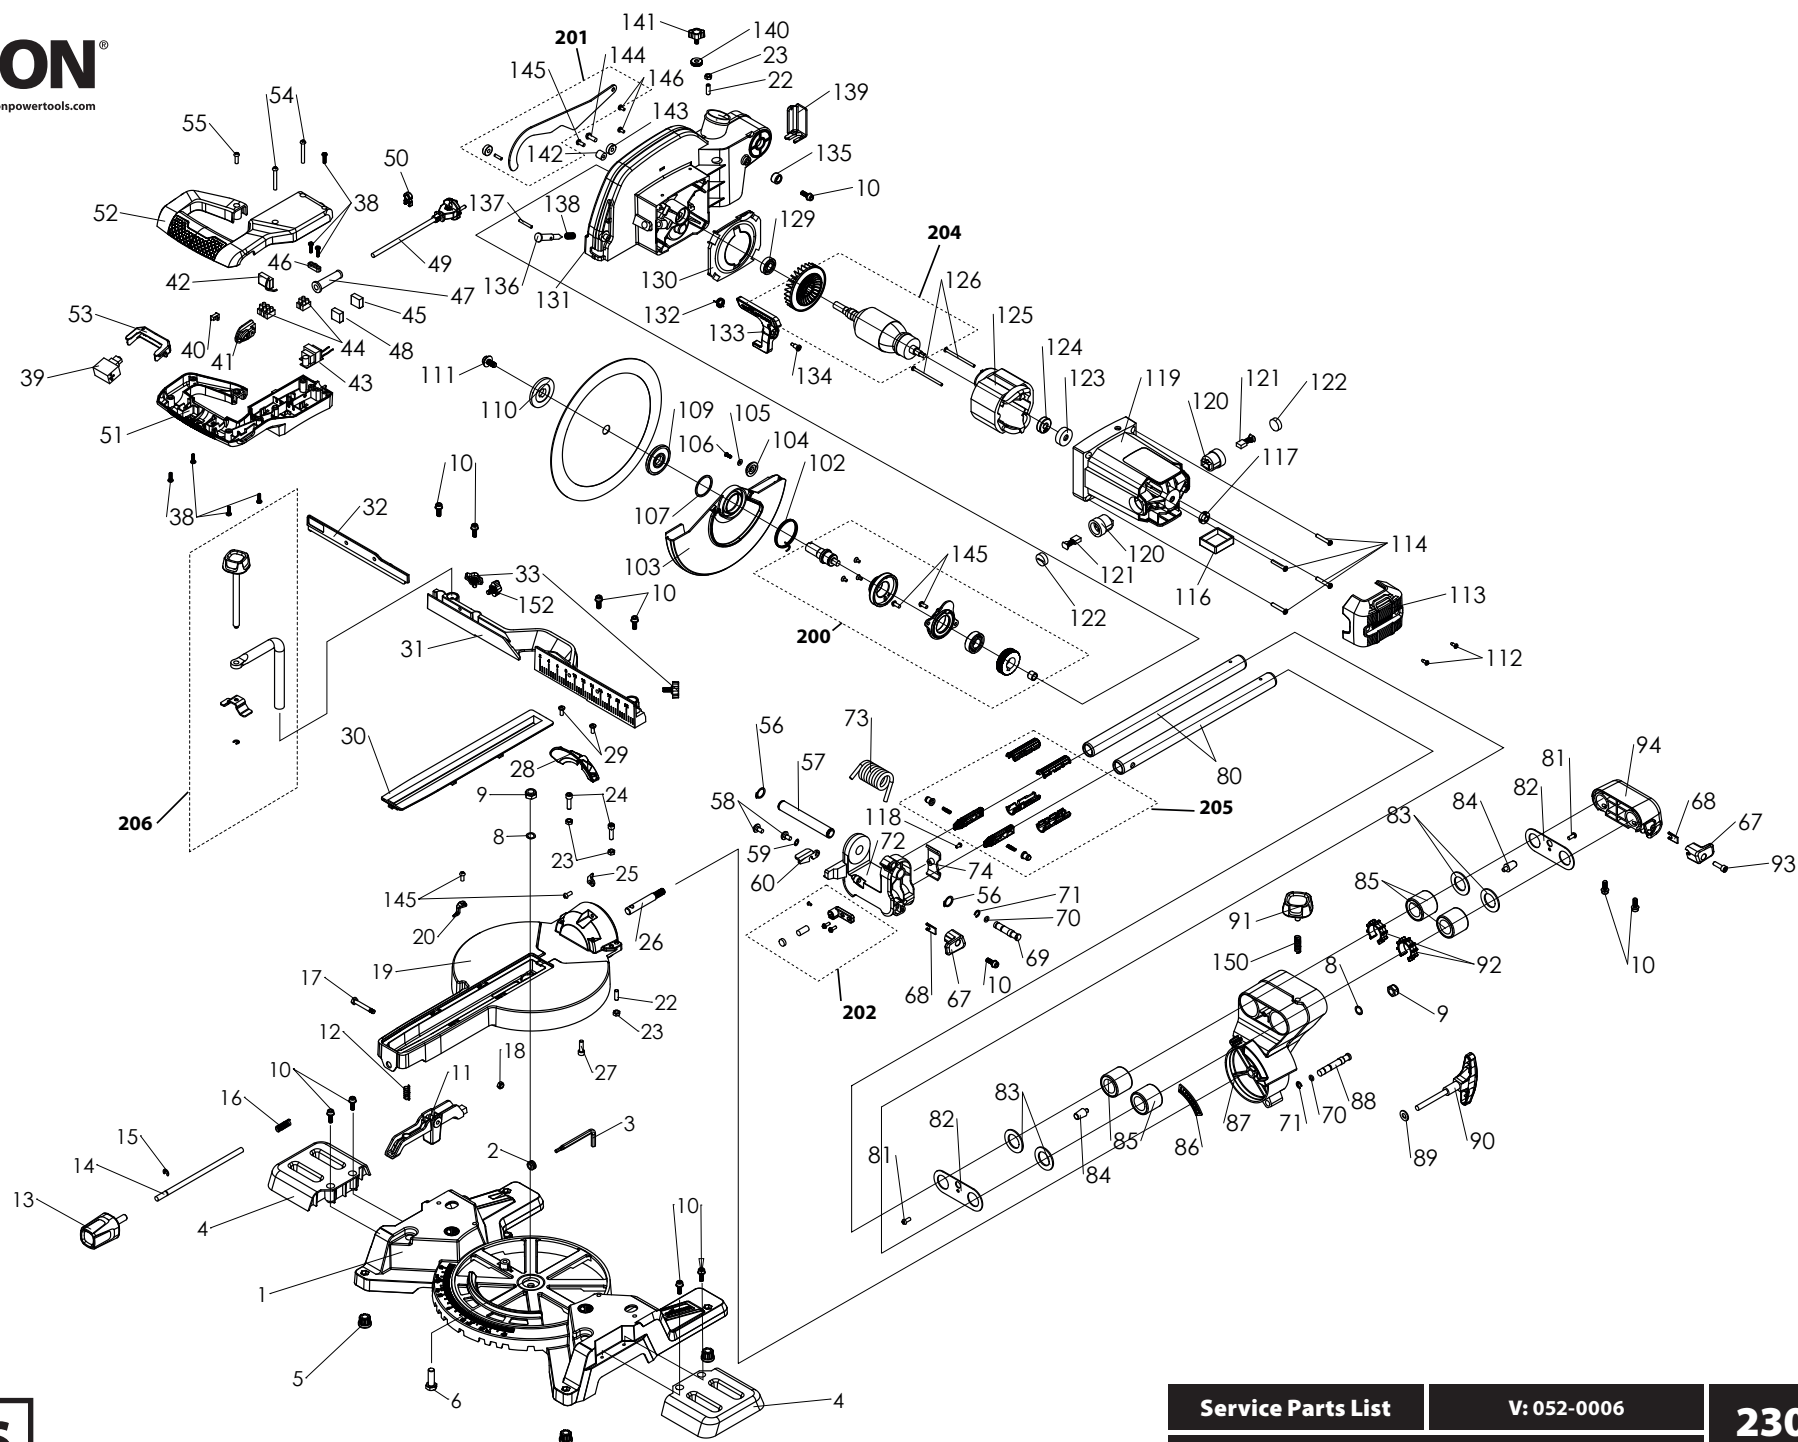

F255 SMS

Service Parts List

V: 052-0006

255mm TCT Sliding Mitre Saw

**230V
UK**

No.	Description	Part Code	Qty	No.	Description	Part Code	Qty	No.	Description	Part Code	Qty
1	Base - Black	052-0349	1	81	Cross Head Screw M5X10	F-SPHPZ-M5-10-ST-BO	2	204	Armature Assembly 1600W (UK 230V)	052-0058	1
2	Grommet 10mm	052-0102	1	82	Bevel bracket Cover (EU)	052-0193	2	205	Slide Shaft Locking unit	052-0062	2
3	Hex Key	052-0325	1	83	Shaft Seal Ring	052-0194	4	206	Basic Work piece clamp (Green)	052-0064	1
4	Table Extension	052-0104	2	84	Rubber Stop	052-0195	2	207	Front Clamp (Green)	052-0327	1
5	Foot	052-0105	4	85	Linear Ball Beaing	052-0196	4				
6	Hex Head Bolt M10x30	F-HB-M10-30-20-ST-BO	1	86	Bevel Label	052-0197	1				
8	Wave Washer 12mm	F-WW-M12-ST-BO	4	87	Neck (EU)	052-0198	1				
9	Nylock Nut M10	F-NNIF-M10-ST-BO	2	88	33.9 Pin	052-0200	1				
10	Flanged Cap Screw M6x16	F-SFCS-M6-16-ST-BO	12	89	Flat Washer 8mm	F-W-M8-ST-BO	1				
11	Table Positioning Handle (Green)	052-0112	1	90	Bevel Lock lever (Green)	052-0203	1				
12	Spring	052-0113	1	91	Sliding Lock Screw (Green)	052-0205	1				
13	Table locking knob (Green)	052-0115	1	92	Bearing Spacer	052-0206	2				
14	Push Rod	052-0116	1	93	Socket Head Cap Tapping Screw (ST4.5x1)	052-0319	1				
15	External E-clip 6mm	F-ECLIP-6-100-ST-BO	1	94	Rear Handle (Green)	052-0209	1				
16	Spring	052-0118	1	102	Torsion Spring	052-0211	1				
17	Screw M6x45	F-SHCS-M6-45-ST-BO	1	103	Lower Guard (Black Plus)	052-0360	1				
18	Nylock Nut M6	F-NNIF-M6-ST-BO	1	104	Guard Roller	052-0213	1				
19	Table	052-0121	1	105	Flat washer M4 (large form)	F-WD-M10-ST-BO	1				
20	Mitre Indicator (Green)	052-0123	1	106	Cross Head Screw M4x8	F-SPHPZ-M4-8-ST-BO	1				
22	Grub Screw M6X20	F-SSCFP-M6-20-ST-BO	2	107	Blade guard Retaining ring	052-0216	1				
23	Hex Nut M6	F-NSF-M6-ST-BO	4	109	Inner Flange (25.4mm)	052-0218	1				
24	Cap screw M6x25	F-SHCS-M6-25-ST-BO	2	110	Outer Flange	052-0219	1				
25	Bevel indicator (Green)	052-0129	1	111	Arbor Bolt	052-0220	1				
26	Connecting Bolt	052-0130	1	112	Tapping Screw (ST4.x16)	052-0320	2				
27	Cap Screw M6x20	F-SHCS-M6-20-ST-BO	1	113	Motor End Cap (Green)	052-0223	1				
28	Chip Deflector	052-0132	1	114	Tapping Screw 5X30	F-TFPX-5-30-ST-BO	4				
29	Cross Head Screw M6X16	F-SPHPZ-M6-16-ST-BO	2	116	PCB Assembly	052-0226	1				
30	Channel Guide (Green)	052-0135	1	117	Constant Speed Magnet	052-0227	1				
31	Fence (EU)	052-0136	1	118	Tapping Screw	F-TFPX-4-8-ST-BO	1				
32	Adjustable Fence (EU)	052-0138	1	119	Motor Housing	052-0229	1				
33	Wing screw (Green)	052-0141	2	120	Carbon brush holder (230V)	052-0230	2				
38	Tapping Screw 4X16	F-TFPX-4-16-ST-BO	7	121	Carbon Brush (Pr) (230V)	052-0231	2				
39	On/Off Switch (110V, 120V, 230V)	052-0143	1	122	Carbon brush cap	052-0232	2				
40	Laser switch	052-0145	1	123	Bearing Cap	052-0233	1				
41	Laser Switch Cap (Green)	052-0147	1	124	Bearing	052-0234	1				
42	Capacitor (220V-240V) 0.22uF 3 Foot	052-0148	1	125	Stator 1600W (UK/EU 230V)	052-0239	1				
43	Laser Transformer (UK/EU 230V)	052-0150	1	126	Tapping Screw (ST4.8x65)	052-0321	2				
44	Terminal Block	052-0154	2	129	Bearing	052-0244	1				
45	Inductor 1 230V (Horeshoe Shape)	052-0309	1	130	Fan Baffle	052-0245	1				
46	Cable Clamp 120V & 230V	052-0156	1	131	Upper Guard	052-0246	1				
47	Cable Sheath - 120V & 230V	052-0157	1	132	Torsion Sping	052-0247	1				
48	Inductor 2 ring inductor 230V	052-0312	1	133	Guard lock lever (Green)	052-0249	1				
49	Power Cable (UK 230V) 3M	052-0159	1	134	Cross Head Shoulder Screw M4X5.7	052-0250	1				
50	Cable Clip (Black) - 230V	052-0165	1	135	Head Stop	052-0251	1				
51	Lower Handle (Green)	052-0168	1	136	Spindle Lock	052-0252	1				
52	Upper Handle (Green)	052-0170	1	137	Roll Pin	052-0253	1				
53	Trigger (Green)	052-0172	1	138	Compression Spring	052-0254	1				
54	Cross Head Screw M5X40	F-SPHPZ-M5-40-ST-BO	2	139	Finger Guard	052-0255	1				
55	Cross Head Screw M5X16	F-SPHPZ-M5-16-ST-BO	1	140	Trench Cut Adjustment	052-0256	1				
56	External Circlip 16mm	F-CCEXT-16-100-ST-PO	2	141	Trench cut Knob (Green)	052-0258	2				
57	head Pivot Axle	052-0176	1	142	Guard Stop	052-0259	1				
58	Cross Head Shoulder Screw M5x8	052-0177	2	143	Bearing	F-B-606-2Z	1				
59	Wave Washer 7mm	F-WW-M7-ST-BO	2	144	Cross Head Screw M6x16	F-SPHPZ-M6-16-ST-BO	1				
60	Trench Stop	052-0179	1	145	Cross Head Screw M4X16	F-SPHPZ-M4-16-ST-BO	1				
67	Cable tidy (Green)	052-0182	2	146	Cross Head Screw M4X8	F-SPHPZ-M4-8-ST-BO	2				
68	Cable Strain	052-0183	2	150	Spring	052-0316	1				
69	Lockdown Pin Knob	052-0184	1	152	Wing screw (Green)	052-0323	1				
70	O-Ring	052-0185	2	154	Shoulder Screw M6 x 12	052-0332	1				
71	External E-clip 8mm	F-ECLIP-8-070-ST-PO	2	156	Dust Port Tube Adaptor UK Plus	052-0333	1				
72	Head Pivot	052-0187	1	157	Dust Bag	052-0334	1				
73	Torsion Spring	052-0188	1	200	Gearbox assembly	052-0050	1				
74	laser Wire Cover	052-0189	1	201	Linkage Assembly	052-0051	1				
80	Rail (EU)	052-0190	2	202	laser assembly (UK/EU)	052-0052	1				



Service Parts List	V: 052-0006	230V UK
255mm TCT Sliding Mitre Saw		