




D - MOTOR GROUP

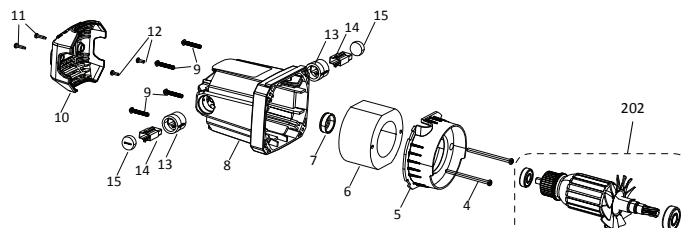

C - HANDLE GROUP

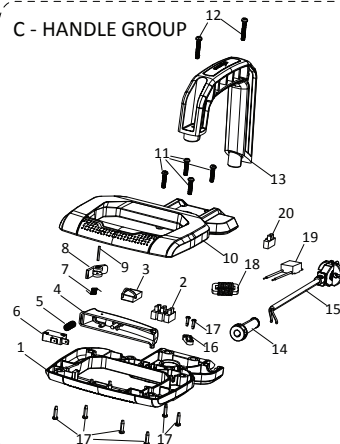

B - LINKAGE GROUP

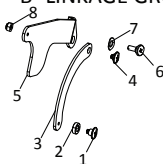

| No.  | Description                          | Part Code            | Qty | No.  | Description                        | Part Code           | Qty | No. | Description                       | Part Code            | Qty |
|------|--------------------------------------|----------------------|-----|------|------------------------------------|---------------------|-----|-----|-----------------------------------|----------------------|-----|
| A1   | Arbour Cover Screw                   | 083-0101             | 2   | E3   | Roller Pin 4x20                    | F-SDL-4-20--ST-BO   | 1   | G38 | Rail pin Cap                      | 102-0150             | 1   |
| A2   | Arbour Cover                         | 083-0102             | 1   | E4   | Locking Pin Spring                 | 083-0162            | 1   | G39 | Rail Support Bracket              | 102-0151             | 1   |
| A3   | Locking Nut M6                       | F-NSH--M6-ST-BO      | 1   | E5   | Ball Bearing 6000 YQ               | F-B-6000-2Z         | 2   | G40 | Hex bolt screw M6*20 with washer  | F-SFCS-M6-20-ST-BO   | 2   |
| A4   | Socket Cap Screw M10x25              | F-SHCS-M10-25-ST-BO  | 1   | E22  | Rubber Bearing Ring                | 083-0196            | 1   | G41 | Hex bolt screw M10*45 with washer | F-SFCS-M10-45-ST-BO  | 4   |
| A6   | Blade Washer                         | 083-0103             | 1   | E23  | Chip Guard                         | 084-0170            | 1   | G42 | Hexkey M6 & M10                   | F-HEXKEY-M6/10-ST-BO | 1   |
| A7   | Flange 89                            | 083-0104             | 2   | E24  | Cross head Screw M5x10             | F-SPHPZ-M5-10-ST-BO | 2   | G43 | Grommet                           | 102-0152             | 1   |
| A9   | Circlip φ48                          | F-CCEXT-48-120-ST-BO | 1   | E201 | Gearbox Assembly (S355)            | 084-0055            | 1   | G44 | Left fence                        | 102-0153             | 1   |
| A10  | Pozi Pan Head Screw M5x14            | F-SPHPZ-M5-14-ST-BO  | 4   |      |                                    |                     |     | G45 | Right fence                       | 102-0154             | 1   |
| A11  | Spring Washer φ5                     | F-SWA-M5-ST-BO       | 3   | F1   | Hex bolt M5*16 with washer         | F-SFCS-M5-16-ST-BO  | 2   | G46 | Base                              | 102-0155             | 1   |
| A12  | Pozi Pan Head Screw M6x12            | F-SPHPZ-M6-12-ST-BO  | 1   | F2   | Banner lock knob                   | 102-0101            | 2   | G47 | Bearing screw M8*12               | 102-0156             | 2   |
| A13  | Blade Head Assembly 355              | 083-0105             | 1   | F3   | Banner rod                         | 102-0102            | 2   | G48 | Wing spring                       | 102-0157             | 2   |
| A14  | Moving Guard Spring Spacer 355       | 083-0106             | 1   | F4   | Sliding Base                       | 102-0103            | 2   | G49 | Wing screw                        | 102-0158             | 2   |
| A15  | Moving Guard Spring                  | 083-0107             | 1   | F5   | Clamp pin                          | 102-0104            | 2   | G50 | Mitre Plate                       | 102-0159             | 1   |
| A16  | Socket Cap Screw M5x12               | F-SHCS-M5-12-ST-BO   | 1   | F6   | Banner move nut                    | 102-0105            | 2   | G51 | Rubber foot                       | 102-0160             | 4   |
| A17  | Ball Bearing 606                     | F-B-606-2Z           | 1   | F7   | Washer 20*10*2                     | F-W-M10-ST-BO       | 3   | G52 | Cross head screw M6*12            | F-SPHPZ-M6-12-ST-BO  | 3   |
| A18  | Bump Stop                            | 083-0108             | 1   | F8   | workpiece clamp                    | 102-0106            | 3   | G53 | Lock nut M10                      | F-NNIF-M10-ST-BO     | 1   |
| A19  | Bump Stop Fixing                     | 083-0109             | 1   | F10  | Cross head screw M5*12 with washer | F-SPHPZ-M5-12-ST-BO | 3   | G54 | Washer 10mm                       | F-W-M10-ST-BO        | 1   |
| A20  | Slider Cap                           | 083-0110             | 1   | F11  | Spring Bearing Insert              | 102-0107            | 6   | G55 | Hex bolt screw M10*35             | F-SHCS-M10-35-ST-BO  | 1   |
| A21  | Moving Guard Assembly 355            | 083-0111             | 1   | F12  | V clamp extrusions                 | 102-0108            | 3   | G56 | Kerf plate                        | 102-0162             | 1   |
|      |                                      |                      |     |      |                                    |                     |     | G58 | Felt Washer                       | 102-0163             | 2   |
| B1   | Linkage Shoulder Screw Upper         | 083-0115             | 1   | F200 | Front Clamp Assembly               | 102-0200            | 1   |     |                                   |                      |     |
| B2   | Screw Spacer                         | 083-0116             | 1   |      |                                    |                     |     |     |                                   |                      |     |
| B3   | Small Linkage                        | 083-0117             | 1   | F201 | Top Clamp Assembly                 | 102-0201            | 1   |     |                                   |                      |     |
| B4   | Linkage Shoulder Screw Middle        | 083-0118             | 1   |      |                                    |                     |     |     |                                   |                      |     |
| B5   | Main Linkage                         | 083-0119             | 1   | F202 | Clamp Bar Assembly                 | 102-0202            | 1   |     |                                   |                      |     |
| B6   | Linkage Shoulder Screw Lower         | 083-0120             | 1   |      |                                    |                     |     |     |                                   |                      |     |
| B7   | Wave Washer M10                      | F-WW-M10-ST-BO       | 1   | G1   | Hex bolt M5*16 with washer         | F-SFCS-M5-16-ST-BO  | 1   |     |                                   |                      |     |
| B8   | Nut M6                               | F-NNIF-M6-ST-BO      | 1   | G2   | Table Locking Knob (Blue)          | 102-0123            | 1   |     |                                   |                      |     |
|      |                                      |                      |     | G3   | Push Rod                           | 102-0124            | 1   |     |                                   |                      |     |
| C1   | Main Handle Lower                    | 083-0121             | 1   | G4   | Locking pin                        | 102-0125            | 1   |     |                                   |                      |     |
| C2   | Terminal Block                       | 083-0122             | 1   | G5   | friction washer                    | 102-0126            | 3   |     |                                   |                      |     |
| C3   | Capacitor 110V                       | 083-0124             | 1   | G6   | Cross head screw M5*12             | F-SPHPZ-M5-12-ST-BO | 5   |     |                                   |                      |     |
| C4   | Main Trigger Blue                    | 084-0106             | 1   | G7   | Rail lock Screw                    | 102-0127            | 3   |     |                                   |                      |     |
| C5   | Main Trigger Spring                  | 083-0126             | 1   | G8   | Lever Spring                       | 102-0128            | 1   |     |                                   |                      |     |
| C6   | Switch                               | 083-0127             | 1   | G9   | Table positioning handle (Blue)    | 102-0129            | 1   |     |                                   |                      |     |
| C7   | Trigger Lock Spring                  | 083-0128             | 1   | G10  | Table positioning Plate            | 102-0130            | 1   |     |                                   |                      |     |
| C8   | Lock Trigger                         | 083-0129             | 1   | G11  | Table                              | 102-0131            | 1   |     |                                   |                      |     |
| C9   | Trigger Lock Pin                     | 083-0130             | 1   | G12  | Cross head screw M5*8              | F-SCHS-M5-8-ST-BO   | 10  |     |                                   |                      |     |
| C10  | Main Handle Upper                    | 083-0131             | 1   | G13  | Cross head screw M5*10 with washer | F-SPHPZ-M5-10-ST-BO | 1   |     |                                   |                      |     |
| C11  | Pozi Pan Head Screw M5x30 w/ Washer  | F-SPHPZ-M5-30-ST-BO  | 4   | G14  | Mitre Indicator (Blue)             | 102-0132            | 1   |     |                                   |                      |     |
| C12  | Pozi Pan Head Screw M5x30 w/ Washer  | F-SPHPZ-M5-30-ST-BO  | 2   | G15  | Hex bolt M6*45                     | F-SCHS-M6-45-ST-BO  | 4   |     |                                   |                      |     |
| C13  | Carry Handle                         | 083-0132             | 1   | G16  | Nut M6                             | F-NNIF-M6-ST-BO     | 4   |     |                                   |                      |     |
| C14  | Cable Sleeve Small                   | 083-0133             | 1   | G17  | Left rail                          | 102-0133            | 1   |     |                                   |                      |     |
| C15  | Cable UK 110V/3m                     | 084-0112             | 1   | G18  | Right rail                         | 102-0134            | 1   |     |                                   |                      |     |
| C16  | Cable Strain Clamp                   | 083-0140             | 1   | G19  | Bevel Bracket Cover                | 102-0135            | 2   |     |                                   |                      |     |
| C17  | Pozi Pan Head Tapping Screw ST4x16   | F-TFPX-4-16-ST-BO    | 8   | G20  | Rail Bearing φ40*φ25*30            | 102-0136            | 4   |     |                                   |                      |     |
|      |                                      |                      |     | G21  | Lock Down Pin                      | 102-0137            | 1   |     |                                   |                      |     |
| D4   | Pozi Pan Head Tapping Screw ST5x80   | F-TFPX-5-80-ST-BO    | 2   | G22  | Deep position cap                  | 102-0138            | 1   |     |                                   |                      |     |
| D5   | Air Baffle 65                        | 084-0125             | 1   | G23  | Hex bolt screw M8*30               | F-SHCS-M8-30-ST-BO  | 1   |     |                                   |                      |     |
| D6   | Stator 65/110-120V 1600W/15A         | 084-0126             | 1   | G24  | Pivot Shaft                        | 102-0139            | 1   |     |                                   |                      |     |
| D7   | Ball Bearing Cap                     | 053-0270             | 1   | G25  | Pin                                | 102-0140            | 1   |     |                                   |                      |     |
| D8   | Motor Housing                        | 083-0150             | 1   | G26  | O ring 10*1.9                      | 102-0141            | 1   |     |                                   |                      |     |
| D9   | Pozi Pan Head Screw M5x30 w/ Washer  | F-SPHPZ-M5-30-ST-BO  | 4   | G27  | E clip 8mm                         | F-ECLIP-8-100-ST-BO | 1   |     |                                   |                      |     |
| D10  | End Cap Blue                         | 084-0131             | 1   | G28  | Neck- Bevel Bracket                | 102-0142            | 1   |     |                                   |                      |     |
| D11  | Pozi Pan Head Tapping Screw ST4x16   | F-TFPX-4-16-ST-BO    | 2   | G29  | Set Screw M6*18                    | F-SSCFP-M6-8-ST-BO  | 2   |     |                                   |                      |     |
| D12  | Pozi Pan Head Screw M4x10            | F-SPHPZ-M4-10-ST-BO  | 2   | G30  | Rail lock pin                      | 102-0143            | 1   |     |                                   |                      |     |
| D13  | Brush Holder                         | 083-0152             | 2   | G31  | Rail lock handle                   | 102-0144            | 1   |     |                                   |                      |     |
| D14  | Carbon Brush 110-120V                | 083-0154             | 2   | G32  | Head spring                        | 102-0145            | 1   |     |                                   |                      |     |
| D15  | Brush Holder Cover                   | 083-0155             | 2   | G33  | Pin Stop- For Packaging            | 102-0146            | 1   |     |                                   |                      |     |
| D202 | Armature 65 Assembly 110-120V UK/USA | 084-0050             | 1   | G34  | Rail positioning pin               | 102-0147            | 1   |     |                                   |                      |     |
|      |                                      |                      |     | G35  | Rail Pin Spring                    | 102-0148            | 1   |     |                                   |                      |     |
| E1   | Arm                                  | 083-0160             | 1   | G36  | Rail positioning plate             | 102-0149            | 1   |     |                                   |                      |     |
| E2   | Arbour Locking Pin                   | 083-0161             | 1   | G37  | Square Nut M10                     | F-NS-M10-ST-BO      | 1   |     |                                   |                      |     |

Service Parts List

V: 102-0002

355mm Mitre Chop Saw (Steel)

110V  
UK